



AZURPOLY

Bede BD-5J



NORMAL CHECKLISTS

Engine Start

- Fuel Cutoff Handle PUSHED
- Master Switch ON
- Ignition Switch ON
- Area CLEAR
- Strobes Switch ON
- Start Button ON
- Throttle START/IDLE
- EGT Max 500° C
- N1 Stable 30-40 %

Taxi

- Avionics Switch ON
- Brakes CHECK
- Flight Controls FREE
- Compass CHECK

Before Take Off

- Canopy LOCKED
- Flaps 15°
- Seat Belts SECURE
- Fuel Pump ON
- Trim SET T/O
- G-Meter RESET
- Transponder ALT

After Take Off

- Security Height CHECK
- Landing Gear UP
- Flaps 0°
- Fuel Pump OFF

Aerobatics

- **Seat Belts SECURE**
- **Fuel Pump ON**

Approach

- **Flaps 30°**
- **Landing Gear DOWN**
- **Speed 85 kts**

After Landing

- **Flaps 0°**
- **Transponder SBY**
- **Seat Belts RELEASE**

Shutdown

- **Throttle MINIMUM**
- **Radio OFF**
- **Transponder OFF**
- **Avionics Switch OFF**
- **Ignition Switch OFF**
- **Fuel Cutoff Handle PULL**
- **Master Switch OFF**

EMERGENCY PROCEDURES

Flaps Failure

- Flap Lever DO NOT MOVE
- G Loading MINIMIZE
- Approach Speed
 - Flaps 0° : 95 kts
 - Flaps 15° : 90 kts
 - Flaps 30° : 85 kts

Landing Gear Failure

- Max Speed 140 kts
- Landing Gear DOWN
- Seat Belts SECURE
- Canopy UNLATCH
- ATC ALERT

Fuel Low Light

- Fuel Pump ON
- Fuel Selector SWITCH
- Precautionary Landing

Battery Not Charging

- ATC ADVISE
- Transponder OFF
- Radio OFF
- Precautionary Landing